



Original		Rechange		Original		Rechange	
	Power		Power		Text		Text / Goto
	1		1		Live		Display / Media
	2		2		VOD		Smart / List
	3		3		Series		Shift + Display / Media
	4		4		WEB TV		Shift + Smart / List
	5		5		Menu		Menu / Home
	6		6		Up		Up
	7		7		Exit		Exit / Cancel / Clear
	8		8		Left		Left
	9		9		OK		OK
	Recall		Back / Return		Right		Right
	0		0		EPG		Guide / EPG / -/--
	SAT		Shift + 0		Down		Down
	SAT		AV / Input / RDS		Info		Info / Angle
	TV/Radio		TV/Radio /		Vol+		Vol+
	Audio		Audio / Lang I/II		Fav		Fav / Marker / PC
	Subtitle		Subtitle / EQ		Page+		CH+ / Page+





Original		Recharge		Original		Recharge	
	Vol-		Vol-		Stop		Stop / Hold
	Mute		Mute / Dimmer		Rec		Rec / Rec Mode
	Page-		CH- / Page-				
	Red / F1		Red / Netflix / Search				
	Green / F2		Green / APP / Repeat				
	Yellow / F3		Yellow / YouTube / Repeat				
	Blue / IPTV		Blue / Prime Video / Random				
	Option		Setup / OPT /				
	V-Format		Picture / Format				
	Resolution		Zoom / Size				
	Sleep		Sleep / Timer				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				

