



Original	Rechange
Standby	Power
USB/Card	Shift + 8
Open/Close	Eject / Surround
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Search	Red / Netflix / Search
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Clear	Exit / Cancel / Clear
0/10	0

Original	Rechange
Menu	Menu / Home
Setup	Setup / OPT /
Display	Display / Media
Title	Sound / Title
Left	Left
Up	Up
Right	Right
Enter	OK
Down	Down
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Step	Pause / Step / Freeze
Stop	Stop / Hold
Play/Pause	Play / Slow
Vol+	Vol+





Original	Recharge
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Angle	Info / Angle
Mute	Mute / Dimmer
Vol-	Vol-
L/R	AV / Input / RDS
N/P	Text / Goto
PBC	Smart / List
Slow	Shift + Play /
V-Mode	D.Menu / Top
Return	Back / Return
HD/Res.	Picture / Format
Program	TV/Radio /
Zoom	Zoom / Size

Original	Recharge

