 









 

 

 

 





 


















 



















 











Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 You Tube	 Shift + Yellow / YouTube /
 Guide	 Guide / EPG / -/-
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 prime video	 Shift + Blue / Prime
 Rakuten Tv	 TV/Radio /
 twitch	 Picture / Format





Original	Recharge	Original	Recharge
 *1	 Setup / OPT /		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

Original	Recharge

