



























 




 





Original	Rechange
	Power
	Mute / Dimmer
	Shift +  Shift + 8
	Sleep / Timer
	TV/Radio /
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/--

Original	Rechange
	Info / Angle
	Menu / Home
	Exit / Cancel / Clear
	Up
	Down
	Vol-
	Left
	Right
	Vol+
	OK
	CH+ / Page+
	CH- / Page-
	Fav / Marker / PC
	Back / Return
	Shift +  Shift + 0
	Red / Netflix / Search
	Green / APP / Repeat



