

Original	Recharge	Original	Recharge
Lang./Rewind	<< / Tune-	0/10	0
TV	TV/Radio /	FAV Pref.	Fav / Marker / PC
Epg	+ Shift + Guide / EPG / -/-	CH/Page-	CH- / Page-
Browse	Smart / List	Green	Green / APP / Repeat
TV/SAT	AV / Input / RDS	Yellow	Yellow / YouTube / Repeat
Lang./Rewind	Sound / Title	Blue	Blue / Prime Video / Random
Red	Red / Netflix / Search	Dev	>> / Preset+
1. ?	1	Freeze	+ Shift + Pause / Step /
2abc	2	Dec/Pause	Pause / Step / Freeze
3def	3	East	Rec / Rec Mode
4ghi	4	H/V Play	Play / Slow
5jkl	5	LNB F.Forward	>> / Tune+
6mno	6	Menu	Menu / Home
7pqrm	7	Mute	Mute / Dimmer
8tuv	8	Opt?	Setup / OPT /
9wxyz	9	App	+ Shift + Green / APP /
Guide Pilote	Guide / EPG / -/-	Info	Info / Angle



Original	Rechange	Original	Rechange
Subt.List	 Subtitle / EQ		
Sleep Timer	 Sleep / Timer		
Video	 +  Shift + 4		
Text	 Text / Goto		
Zoom	 Zoom / Size		
PWR On/Off	 Power		
Menu Up	 Up		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Exit	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
CH/Page+	 CH+ / Page+		
Volume-	 Vol-		
Audio	 Audio / Lang I/II		

