











 

 

 



 











 



 

 





 



 







 

 





 

 







| Original   | Rechange   |
|--|--|
|  Standby      |  Power            |
|  Standby Tv   |  Shift + Power    |
|  Picture Navi |  Picture / Format |
|  Input Tv     |  AV / Input / RDS |
|  1            |  1                |
|  2            |  2                |
|  3            |  3                |
|  4            |  4                |
|  5            |  5                |
|  6            |  6                |
|  7            |  7                |
|  8          |  8              |
|  9          |  9              |
|  0          |  0              |
|  Vol+       |  Vol+           |
|  Vol-       |  Vol-           |
|  Time/text  |  Text / Goto    |

| Original   | Rechange  |
|--|---|
|  Clear    |  Exit / Cancel / Clear |
|  Audio    |  Audio / Lang I/II     |
|  Subtitle |  Subtitle / EQ         |
|  Top Menu |  D.Menu / Top          |
|  Menu     |  Menu / Home           |
|  Return   |  Back / Return         |
|  Display  |  Display / Media       |
|  Up       |  Up                    |
|  Down     |  Down                  |
|  Left     |  Left                  |
|  Right    |  Right                 |
|  OK     |  OK                  |
|  I<<    |  I<< / Preset-       |
|  ←/<    |  CH- / Page-         |
|  →/  >  |  CH+ / Page+         |
|  >>     |  >>  / Preset+       |
|  <</<   |  << / Tune-          |





|   | Original       | Recharge  | Original | Recharge |
|---|----------------|---|----------|----------|
|  | Play           |  Play / Slow           |          |          |
|  | >>/I>          |  >> / Tune+            |          |          |
|  | Fast/Slow Play |  Setup / OPT /         |          |          |
|  | Pause          |  Pause / Step / Freeze |          |          |
|  | Stop           |  Stop / Hold           |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |
|   |                |   |          |          |

