



 

 

 



 











 

 



 






Original	Recharge
 Power	 Power
 AV Source	 AV / Input / RDS
 Radio	 TV/Radio /
 Audio Source	 Shift + AV / Input / RDS
 TV / ARC	 Sleep / Timer
 Main menu	 Menu / Home
 Disc Menu	 D.Menu / Top
 Popup Menu	 Setup / OPT /
 OSC / Program	 Shift + TV/Radio / Program
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 Search / Auto	 Smart / List
 Search / Auto	 Shift + Red / Netflix /
 0	 0
 Clear / Delete	 Exit / Cancel / Clear
 Volume-	 Vol-
 Up	 Up
 Volume+	 Vol+
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Mute	 Mute / Dimmer
 Repeat	 Shift + Green / APP /
 Zoom / Resolution	 Picture / Format
 Zoom / Resolution	 Zoom / Size





Original		Recharge		Original		Recharge	
	Mono/Stereo / Subtitle		Subtitle / EQ		Yellow		Yellow / YouTube / Repeat
	RDS / Display		Display / Media		Blue		Blue / Prime Video / Random
	LypSync		Info / Angle				
	Surround		Shift + Eject / Surround				
	Tone		Text / Goto				
	Speaker Level		Sound / Title				
	Open / Close		Eject / Surround				
	Stop		Stop / Hold				
	Play / Pause		Play / Slow				
	Play / Pause		Pause / Step / Freeze				
	Audio		Audio / Lang I/II				
	<< / Tune-		<< / Tune-				
	>> / Tune+		>> / Tune+				
	<< / Preset-		<< / Preset-				
	>> / Preset+		>> / Preset+				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				

