






 


 



 




 


 



 

 





	Original	Recharge		Original	Recharge
	CD	+ Shift + 3		5	5
	Disc Skip	Display / Media		6	6
	Sleep	Sleep / Timer		7	7
	System Power	Power		8	8
	Play	Play / Slow		9	9
	Pause	Pause / Step / Freeze		10	0
	Stop	Stop / Hold		Tuner	+ Shift + 6
	I<<	I<< / Preset-		Shift	Smart / List
	>>I	>>I / Preset+		11	Red / Netflix / Search
	Tape	+ Shift + 5		12	Green / APP / Repeat
	CD Direct	Audio / Lang I/II	>12 button"/>	>12	Yellow / YouTube / Repeat
	Select 10	Guide / EPG / -/--		Phono	+ Shift + 2
	P.File	Fav / Marker / PC		Up	
	1	1		EQ	Subtitle / EQ
	2	2		Video 1 / DAT	+ Shift + 1
	3	3		Left	
	4	4		Right	






Original	Recharge
 CD	 3 3
 System Power	 Power
 Tape	 5 5
 << Deck A	 << / Tune-
 << Deck B	 Shift + << /
 < Deck A	 Left
 < Deck B	 Shift + Left
 Deck A >	 Play / Slow
 Deck B >	 Shift + Play /
 >> Deck A	 >> / Tune+
 >> Deck B	 Shift + >> /
 Stop Deck A	 Stop / Hold
 Stop Deck B	 Shift + Stop /
 Pause Deck A	 Pause / Step / Freeze
 Pause Deck B	 Shift + Pause / Step /
 O Deck A	 OK
 O Deck B	 Shift + OK

Original	Recharge
 Rec Deck A	 Rec / Rec Mode
 Rec Deck B	 Shift + Rec / Rec Mode
 Tuner	 6 6
 Phono	 2 2
 Video 1 / DAT	 1 1
 Video 2	 4 4
 Vol+	 Vol+
 Vol-	 Vol-




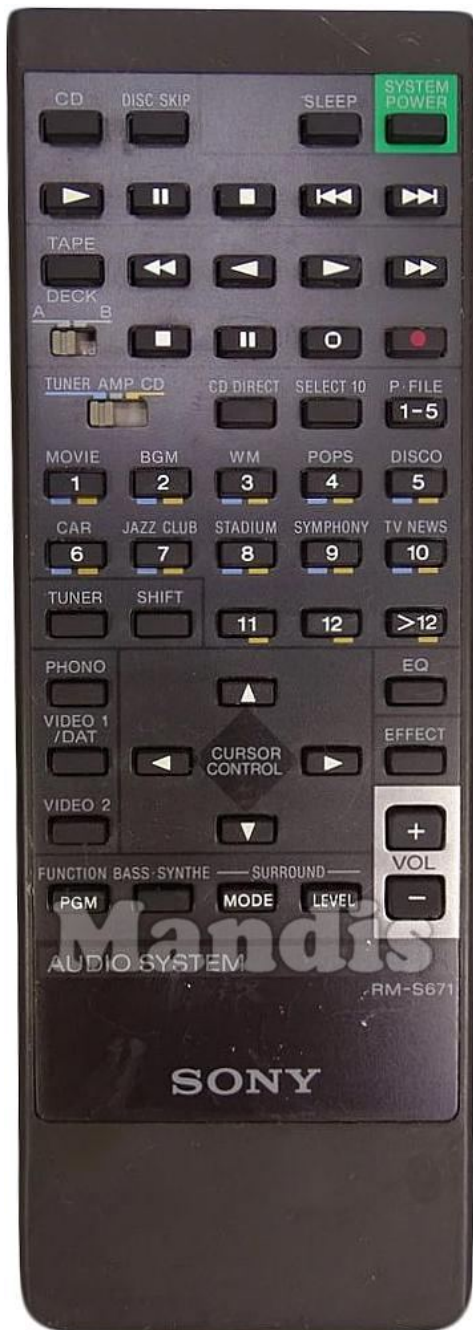







 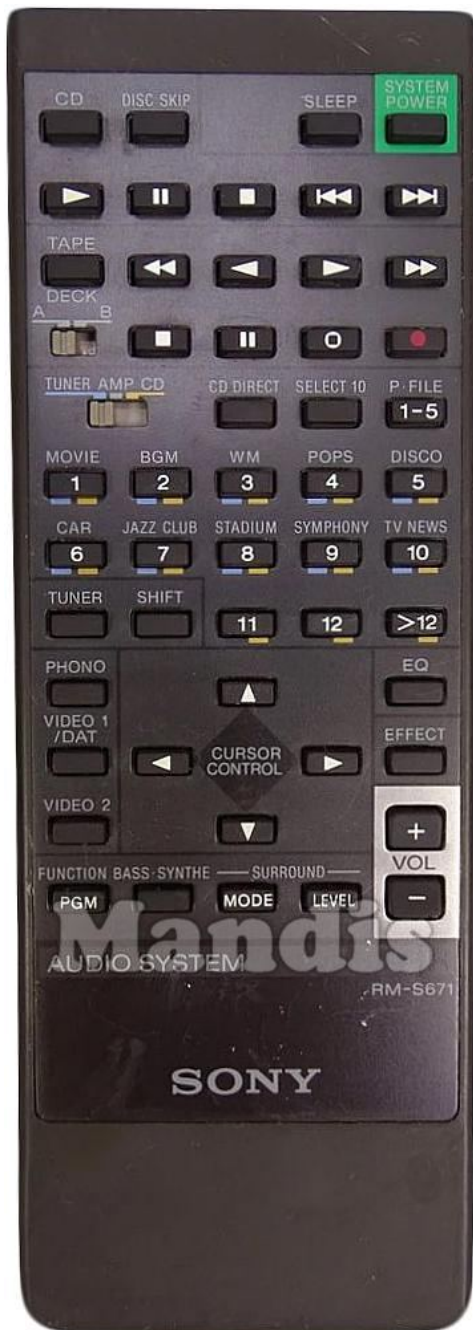



Original	Recharge
CD	Shift + 3
System Power	Power
Tape	Shift + 5
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	Guide / EPG / /--
Tuner	Shift + 6
Shift	Smart / List
Phono	Shift + 2
Video 1 / DAT	Shift + 1

Original	Recharge
Video 2	Shift + 4
Vol+	Vol+
Vol-	Vol-





Original	Recharge
 CD	 +  Shift + 3
 System Power	 Power
 Tape	 +  Shift + 5
 Select 10	 Smart / List
 P.File	 Display / Media
 1/Movie	 1
 2/BGM	 2
 3/WM	 3
 4/POPS	 4
 5/Disco	 5
 6/CAR	 6
 7/Jazz Club	 7
 8/Stadium	 8
 9/Symphony	 9
 10/TV News	 0
 Tuner	 +  Shift + 6
 Phono	 +  Shift + 2

Original	Recharge
 Video 1 / DAT	 +  Shift + 1
 Video 2	 +  Shift + 4
 Vol+	 Vol+
 Vol-	 Vol-

