





 

 





 

 



 

 




 





 


Original	Recharge
 Receiver Power	 Power
 Input Select-	 CH- / Page-
 Input Select+	 CH+ / Page+
 TV Control Input	 Shift + AV / Input / RDS
 TV Control Power	 Shift + Power
 BD	 2
 TV	 1
 DVR	 5
 TV Control CH+	 Shift + CH+ /
 CD	 3
 CD-R	 9
 TUNER	 6
 TV Control CH-	 Shift + CH- /
 VIDEO	 4
 AUX	 7
 TV Control Vol+	 Shift + Vol+
 iPod USB	 8

Original	Recharge
 Dimmer	 Shift + Mute / Dimmer
 Signal Sel	 Picture / Format
 TV Control Vol-	 Shift + Vol-
 Auto / Direct	 Red / Netflix / Search
 Stereo / ALC	 Green / APP / Repeat
 Standard	 Yellow / YouTube / Repeat
 Adv Surr	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Master	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Master Volume-	 Vol-
 Setup	 Setup / OPT /
 Return	 Back / Return



 

 

 

 












 






 




 










 

 

 



 

 

 



Original	Rechange
 Mute	 Mute / Dimmer
 Bass-	 << / Preset-
 Bass+	 >> / Preset+
 Tre-	 << / Tune-
 Tre+	 >> / Tune+
 Display	 Display / Media
 S.Retriever	 Sound / Title
 EQ	 Subtitle / EQ
 CH Select	 Shift + OK
 Sleep	 Sleep / Timer
 SB CH	 Zoom / Size
 Phase	 TV/Radio /
 CH Level+	 Shift + Up
 Midnight	 Text / Goto
 Speakers	 Eject / Surround
 CH Level-	 Shift + Down

Original	Rechange





Original	Rechange
 Power Source	 Power
 Tuner	 Shift + 6
 Menu	 Menu / Home
 Master Volume	 Vol+
 Tune+	 >> / Tune+
 Tune+	 Up
 Preset-	 I<< / Preset-
 Preset-	 Left
 Enter	 OK
 Preset+	 >>I / Preset+
 Preset+	 Right
 Tune-	 << / Tune-
 Tune-	 Down
 Master Volume	 Vol-
 Search	 Red / Netflix / Search
 Band	 Subtitle / EQ
 Mute	 Mute / Dimmer

Original	Rechange
 1	 1
 2	 2
 3	 3
 Display	 Display / Media
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0







Original		Recharge		Original		Recharge	
	iPod USB		8				
	Top Menu		D.Menu / Top				
	Master Volume		Vol+				
	Master Volume		Vol-				
	iPod CTRL		Setup / OPT /				
	Pause		Pause / Step / Freeze				
	Play		Play / Slow				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				





Original	Recharge
 Receiver Power	 Power
 Input Select-	 CH- / Page-
 Input Select+	 CH+ / Page+
 TV Control Input	 Shift + AV / Input / RDS
 TV Control Power	 Shift + Power
 BD	 2
 TV	 1
 DVR	 5
 TV Control CH+	 Shift + CH+ /
 CD	 3
 CD-R	 9
 TUNER	 6
 TV Control CH-	 Shift + CH- /
 VIDEO	 4
 AUX	 7
 TV Control Vol+	 Shift + Vol+
 iPod USB	 8

Original	Recharge
 Dimmer	 Shift + Mute / Dimmer
 Signal Sel	 Picture / Format
 TV Control Vol-	 Shift + Vol-
 Auto / Direct	 Red / Netflix / Search
 Stereo / ALC	 Green / APP / Repeat
 Standard	 Yellow / YouTube / Repeat
 Adv Surr	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 Master	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Master Volume-	 Vol-
 Setup	 Setup / OPT /
 Return	 Back / Return





Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer				
	Bass-		I<< / Preset-				
	Bass+		>>I / Preset+				
	Tre-		<< / Tune-				
	Tre+		>> / Tune+				
	Display		Display / Media				
	S.Retriever		Sound / Title				
	EQ		Subtitle / EQ				
	CH Select		Shift + OK				
	Sleep		Sleep / Timer				
	SB CH		Zoom / Size				
	Phase		TV/Radio /				
	CH Level+		Shift + Up				
	Midnight		Text / Goto				
	Speakers		Eject / Surround				
	CH Level-		Shift + Down				

