

 






 


 
 



 
















 



 



 








 


 




 


 









 

 

 

 





 

 


 
 

 
 


 

 

 

Original	Recharge	Original	Recharge
 Power	 Power	 -/--	 Guide / EPG / -/--
 SET	 Fav / Marker / PC	 Prog+	 CH+ / Page+
 Wide	 Zoom / Size	 Prog-	 CH- / Page-
 Hi-Speed REW	 Shift + << /	 Vol+	 Vol+
 Counter Remain	 Red / Netflix / Search	 Vol-	 Vol-
 TV/Video	 TV/Radio /	 Play	 Play / Slow
 Eject	 Eject / Surround	 Stop	 Stop / Hold
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 FF	 >> / Tune+
 3	 3	 Index Search >>	 >>  / Preset+
 4	 4	  << Index Search	  << / Preset-
 5	 5	 REW	 << / Tune-
 6	 6	 Skip	 Exit / Cancel / Clear
 7	 7	 Wheel >	 Shift + >>  / Preset+
 8	 8	 Up	 Up
 9	 9	 < Wheel	 Shift +  << / Preset-
 0	 0	 Down	 Down





**Original**

**Rechange**

	Right		Right
	Left		Left
	Menu		Menu / Home
	Execute		OK
	Input Select		AV / Input / RDS
	Audio Monitor		Audio / Lang I/II
	Timer Clear		Sleep / Timer
	TrackingAuto/Manual (VHS)		Smart / List
	Tracking ▼		Shift + CH- /
	Display		Display / Media
	Tracking ▲		Shift + CH+ /
	Counter Reset		Green / APP / Repeat
	Rec		Rec / Rec Mode
	Tape Speed SP/LP (VHS)		Setup / OPT /
	Showview		Picture / Format

**Original**

**Rechange**






Original	Recharge
Power	Power
Wide	Zoom / Size
Display	Display / Media
TV/Video	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--
Vol+	Vol+
Vol-	Vol-

Original	Recharge
Prog+	CH+ / Page+
Prog-	CH- / Page-
Audio Monitor	Audio / Lang I/II
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[≡]	Text / Goto
□	Smart / List

