



Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Menu		Menu / Home
	2		2		Recall		Back / Return
	3		3		P+		Shift + CH+ /
	4		4		P-		Shift + CH- /
	5		5		Text		Text / Goto
	6		6		Exit		Exit / Cancel / Clear
	7		7		Fav		Fav / Marker / PC
	8		8		EPG		Guide / EPG / -/-
	9		9		Up		Up
	0 / Sleep		0		Left		Left
	0 / Sleep		Sleep / Timer		OK		OK
	TV/Rad		TV/Radio /		Right		Right
	TV / SAT		AV / Input / RDS		Down		Down
	CH+		CH+ / Page+		Red / V-FMT		Red / Netflix / Search
	CH-		CH- / Page-		Red / V-FMT		Picture / Format





Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue / Timer	Blue / Prime Video / Random
Blue / Timer	Shift + Sleep / Timer
Info	Info / Angle
Subt	Subtitle / EQ
Audio	Audio / Lang I/II
Find	Shift + Red / Netflix /
Rec	Rec / Rec Mode
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
<II	Shift + Left

Original	Recharge
II>	Shift + Right
Movie	Smart / List
USB	Shift + 8
USB	Display / Media

