




Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Freeze	 Pause / Step / Freeze
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Previous	 Back / Return
 Red	 Red / Netflix / Search
 Blue	 Blue / Prime Video / Random

Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Aspect	 Shift + Picture / Format
 I/II	 Audio / Lang I/II
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 TV	 Exit / Cancel / Clear
 TV	 Smart / List
 Up	 Up
 PR+	 CH+ / Page+
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 Vol-	 Vol-





Original	Rechange
Picture	Picture / Format
Sound	Sound / Title
Text	Text / Goto
Sleep	Sleep / Timer
Zoom	Zoom / Size
Index	Eject / Surround
Hold	Stop / Hold
Cancel	+  Shift + Exit / Cancel / Clear
Sub.code	Subtitle / EQ
Reveal	TV/Radio /
Mix	Setup / OPT /

Original	Rechange

