



Original	Recharge
On	Power
Off	Shift + Power
Mute	Mute / Dimmer
AVR	Fav / Marker / PC
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
VID1/VCR	Guide / EPG / -/--
VID2/TV	Shift + 1
VID3/CBL/SAT	Shift + 0
VID4	Shift + Guide / EPG / -/--
AM/FM	Shift + 6
6/8 CH	Picture / Format
Sleep	Sleep / Timer
Test	Text / Goto
Vol+	Vol+
Surr.	Eject / Surround

Original	Recharge
Night	Info / Angle
M-Room	Zoom / Size
Vol-	Vol-
CH./[≡?]	Yellow / YouTube / Repeat
Up	Up
SPKR/Menu	Menu / Home
Left	Left
Set	D.Menu / Top
Right	Right
Digital/[≡X]	Red / Netflix / Search
Down	Down
Delay/Normal	Setup / OPT /
1	1
2	2
3	3
4	4
5	5







 






















 

 










 








 







 












Original	Recharge
6	6
7	7
8	8
Tun-M/[≡+]	Green / APP / Repeat
9	9
0	0
Mem/[≡◆]	Rec / Rec Mode
Tuning ▲	>> / Tune+
Direct	TV/Radio /
Clear	Exit / Cancel / Clear
Preset ▲	>>I / Preset+
Tuning ▼	<< / Tune-
OSD	Display / Media
RDS	AV / Input / RDS
Preset ▼	I<< / Preset-
Dolby	Sound / Title
DTS Surr.	Smart / List

Original	Recharge
DTS Neo 6	Subtitle / EQ
Logic 7	Blue / Prime Video / Random
Stereo	Audio / Lang I/II
I<</Skip Down	Shift + I<< / Preset-
Skip Up/>>I	Shift + >>I / Preset+
<< DVD	Shift + << /
Play DVD	Play / Slow
>> DVD	Shift + >> /
Stop DVD	Stop / Hold
Pause DVD	Pause / Step / Freeze















 



















 











 

 

 



 








 






Original		Rechange		Original		Rechange	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Vol+		Vol+		5		5
	Night		Info / Angle		6		6
	M-Room		Zoom / Size		7		7
	Vol-		Vol-		8		8
	CH./[≡?]		Yellow / YouTube / Repeat		Tun-M/[≡+]		Green / APP / Repeat
	Up		Up		9		9
	SPKR/Menu		Menu / Home		0		0
	Left		Left		Mem/[≡◇]		Rec / Rec Mode
	Set		D.Menu / Top		Direct		TV/Radio /
	Right		Right		Clear		Exit / Cancel / Clear
	Digital/[≡X]		Red / Netflix / Search		Preset ▲		Shift + >>I / Preset+
	Down		Down		RDS/D.Skip		AV / Input / RDS
	Delay/Normal		Setup / OPT /		Preset ▼		Shift + I<< / Preset-
	1		1		I<<		I<< / Preset-
	2		2		>>I		>>I / Preset+









Original		Rechange		Original		Rechange	
	Power On		Power		Vol- VCR		Vol-
	Play		Play / Slow		PR- VCR		CH- / Page-
	Pause		Pause / Step / Freeze		1		1
	Stop		Stop / Hold		2		2
	Mem/[≡ ◆]		Rec / Rec Mode		3		3
	<<		<< / Tune-		4		4
	>>		>> / Tune+		5		5
	I<<		I<< / Preset-		6		6
	I>>		I>> / Preset+		7		7
	Direct		TV/Radio /		8		8
	Delay/Normal		Setup / OPT /		9		9
	RDS/D.Skip		AV / Input / RDS		0		0
	SPKR/Menu		Menu / Home		Tun-M/[≡ +]		Green / APP / Repeat
	Power (On/Off)		OK		Preset ▲/Blue		Blue / Prime Video / Random
	Clear VCR		Exit / Cancel / Clear		Power Off		Shift + Power
	Vol+ VCR		Vol+		Play VCR		Shift + Play /
	PR+ VCR		CH+ / Page+		Stop VCR		Shift + Stop /

Hold







