





























 








































Original	Recharge	Original	Recharge
Power		Power	
Mute		Mute / Dimmer	
Audio		Audio / Lang I/II	
SUBT		Subtitle / EQ	
Tv/Radio		TV/Radio /	
TXT		Text / Goto	
Menu		Menu / Home	
Up		Up	
i		Info / Angle	
Left		Left	
OK		OK	
Right		Right	
ESC		Exit / Cancel / Clear	
Down		Down	
↔		Back / Return	
Vol+		Vol+	
PR+		CH+ / Page+	
Vol-		Vol-	
PR-		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
EPG		Guide / EPG / -/--	
0		0	
FAV		Fav / Marker / PC	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	










Original	Recharge	Original	Recharge
Blue	 Blue / Prime Video / Random		



Original	Recharge	Original	Recharge
PWR On/Off	 Power	TV/SAT	 Smart / List
Mute	 Mute / Dimmer	CH/Page+	 CH+ / Page+
Audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Sleep Timer	 Sleep / Timer	CH/Page-	 CH- / Page-
Radio	 TV/Radio /	1. ?	 1
Text	 Text / Goto	2abc	 2
Menu	 Menu / Home	3def	 3
Menu Up	 Up	4ghi	 4
Info	 Info / Angle	5jkl	 5
Menu Left	 Left	6mno	 6
OK Enter	 OK	7pqrm	 7
Menu Right	 Right	8tuv	 8
Exit	 Exit / Cancel / Clear	9wxyz	 9
Menu Down	 Down	Guide Pilote	 Guide / EPG / -/--
Back	 Back / Return	0/10	 0
Volume+	 Vol+	FAV Pref.	 Fav / Marker / PC



Original	Recharge	Original	Recharge
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
TV	 Shift + 1		
Video	 Shift + 4		
Epg	 Shift + Guide / EPG / -/-		

