





 







































 











 











Original		Rechange		Original		Rechange	
	Power		Power		Rev		<< / Tune-
	Disc Side A/B		D.Menu / Top		Pause		Pause / Step / Freeze
	Open/Close		Eject / Surround		Play		Play / Slow
	Audio		Audio / Lang I/II		FWD		>> / Tune+
	Subtitle		Subtitle / EQ		Stop		Stop / Hold
	Angle		Info / Angle		<II Step		CH- / Page-
	Display		Display / Media		Step II >		CH+ / Page+
	Menu		Menu / Home		1		1
	Title		Sound / Title		2		2
	Up		Up		3		3
	Return		Back / Return		Clear		Exit / Cancel / Clear
	Left		Left		4		4
	Enter		OK		5		5
	Right		Right		6		6
	Prev		I<< / Preset-		+10		Guide / EPG / -/--
	Down		Down		7		7
	Next		>>I / Preset+		8		8



