



































 





















Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <</ <<	 << / Tune-
 >>/>>	 >> / Tune+
 AD/Subt.	 Audio / Lang I/II
 TTX/MIX	 Text / Goto
 Samsung TV	 TV/Radio /
 Settings	 Setup / OPT /
 Source	 AV / Input / RDS
 Home	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK

Original	Rechange
 Right	 Right
 Exit	 Exit / Cancel / Clear
 PRE-CH	 Fav / Marker / PC
 Down	 Down
 Vol+	 Vol+
 CH List	 Smart / List
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 Ch-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original	Recharge	Original	Recharge
 9	 9		
 Guide	 Guide / EPG / -/--		
 0	 0		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Return	 Back / Return		
 Netflix	 Shift + Red / Netflix /		
 video prime	 Shift + Blue / Prime		

