






 


Original	Rechange
POWER	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
SUBPAGE	Guide / EPG / -/--
I/II	Audio / Lang I/II
SWAP / RED	Back / Return
SWAP / RED	Red / Netflix / Search
AV	AV / Input / RDS
FREEZE	Pause / Step / Freeze

Original	Rechange
GAME / BLUE	Blue / Prime Video / Random
SLEEP / GREEN	Green / APP / Repeat
SLEEP / GREEN	Sleep / Timer
STATUS /	Yellow / YouTube / Repeat
PP/CANCEL	Exit / Cancel / Clear
P.S	Display / Media
MUTE	Mute / Dimmer
UP	Up
CH+	CH+ / Page+
TV/TEXT	Text / Goto
LEFT	Left
VOL-	Vol-
MENU	Menu / Home
RIGHT	Right
VOL+	Vol+
DOWN	Down
CH-	CH- / Page-





	Original	Rechange		Original	Rechange
	INDEX		Info / Angle		
	T.MODE		Setup / OPT /		
	ZOOM/SIZE		Zoom / Size		
	HOLD		Stop / Hold		
	REVEAL		Play / Slow		
	MIX		Shift + Text /		
	OK		OK		
	T.BRI		Smart / List		
	PIP/POP		Picture / Format		
	MP/SP		Sound / Title		

	Original	Rechange

