











 







 

























 



 







 













Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		MTS		Setup / OPT /
	1		1		CH+		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		RecList		Smart / List
	4		4		CH-		CH- / Page-
	5		5		FAV/List		Fav / Marker / PC
	6		6		Rec		Rec / Rec Mode
	7		7		Freeze		Pause / Step / Freeze
	8		8		Menu		Menu / Home
	9		9		Up		Up
	DTV/ATV		D.Menu / Top		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Recharge
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<</Guide	<< / Tune-
Play/Pause/Timeshift	Play / Slow
>>/Aspect	>> / Tune+
I<</Cancel	I<< / Preset-
>>I/Sub.PG	>>I / Preset+
Stop/Index	Stop / Hold
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Eject / Surround
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto

Original	Recharge

