



| Original | Rechange |
|----------------|-------------------|
| Power | Power |
| Source (Games) | AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| TV | TV/Radio / |
| 0 | 0 |
| Recall | Fav / Marker / PC |
| Vol+ | Vol+ |
| Mute | Mute / Dimmer |
| PR+ | CH+ / Page+ |

| Original | Rechange |
|------------------|-----------------------|
| Vol- | Vol- |
| World/Internet | Smart / List |
| PR- | CH- / Page- |
| Menu | Menu / Home |
| Q.Menu | D.Menu / Top |
| Up | Up |
| Left | Left |
| OK | OK |
| Right | Right |
| Down | Down |
| Back | Back / Return |
| Exit | Exit / Cancel / Clear |
| i | Info / Angle |
| Movie-Music-Phot | Display / Media |
| Guide | Guide / EPG / -/- |
| */o | Picture / Format |
| */o.. | Setup / OPT / |





| | Original | Recharge | Original | Recharge |
|-------------------------------------------------------------------------------------|----------|---------------------------------------------------------------------------------------------------------------|----------|----------|
|  | [≡]/Text |  Text / Goto | | |
|  | Red |  Red / Netflix / Search | | |
|  | Green |  Green / APP / Repeat | | |
|  | Yellow |  Yellow / YouTube / Repeat | | |
|  | Blue |  Blue / Prime Video / Random | | |
|  | Lang |  Audio / Lang I/II | | |
|  | [≡].. |  Subtitle / EQ | | |
|  | [-o-] |  Zoom / Size | | |
|  | << |  << / Tune- | | |
|  | Pause |  Pause / Step / Freeze | | |
|  | >> |  >> / Tune+ | | |
|  | Rec |  Rec / Rec Mode | | |
|  | Play |  Play / Slow | | |
|  | Stop |  Stop / Hold | | |
| | | | | |
| | | | | |
| | | | | |

