 



















 













 














 






















Original	Recharge	Original	Recharge
 Power	 Power	 Vol+	 Vol+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 CH+	 CH+ / Page+
 2	 2	 CH-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Back	 Back / Return
 6	 6	 FAV	 Fav / Marker / PC
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Left	 Left
 0	 0	 Right	 Right
 Tv Guide	 Guide / EPG / -/-	 OK	 OK
 Recall	 Shift + Back / Return	 Info	 Info / Angle
 Picture	 Picture / Format	 Text	 Text / Goto
 Sound	 Sound / Title	 Subtitle	 Subtitle / EQ
 Source	 AV / Input / RDS	 TV	 TV / Radio /

Original	Recharge	Original	Recharge
 Power	 Power	 TV	 TV
 Mute	 Mute	 DVD	 DVD
 1	 1	 SAT	 SAT
 2	 2	 AUX	 AUX
 3	 3	 SLOW	 SLOW
 4	 4	 STEP-FREEZE	 STEP-FREEZE
 5	 5	 HOLD	 HOLD
 6	 6	 REC MODE	 REC MODE
 7	 7	 TUNE-	 TUNE-
 8	 8	 TUNE+	 TUNE+
 9	 9	 PRESET-	 PRESET-
 0	 0	 PRESET+	 PRESET+
 Tv Guide	 Tv Guide	 TITLE	 TITLE
 Recall	 Recall	 LANG	 LANG
 Picture	 Picture	 EQ	 EQ
 Sound	 Sound	SURROUND	SURROUND
Source	Source	SOUND	SOUND
TV	TV	AUDIO	AUDIO
TV	TV	SUBTITLE	SUBTITLE
TV	TV	TIMER	TIMER
TV	TV	PROGRAM	PROGRAM
TV	TV	RDS	RDS
TV	TV	TV RADIO	TV RADIO
TV	TV	AV INPUT	AV INPUT
TV	TV	HOME	HOME
TV	TV	MENU	MENU
TV	TV	CLEAR	CLEAR
TV	TV	EXIT	EXIT
TV	TV	CANCEL	CANCEL
TV	TV	RETURN	RETURN
TV	TV	BACK	BACK
TV	TV	PC FAV MARKER	PC FAV MARKER
TV	TV	HOME	HOME
TV	TV	ANGLE	ANGLE
TV	TV	MENU	MENU
TV	TV	INFO	INFO
TV	TV	OK	OK
TV	TV	RETURN	RETURN
TV	TV	BACK	BACK
TV	TV	CLEAR	CLEAR
TV	TV	CANCEL	CANCEL
TV	TV	LIST	LIST
TV	TV	SMART	SMART
TV	TV	MEDIA	MEDIA
TV	TV	DISPLAY	DISPLAY
TV	TV	TV	TV
TV	TV	DVD	DVD
TV	TV	CD-STB	CD-STB
TV	TV	1	1
TV	TV	VIDEO	VIDEO
TV	TV	2	2
TV	TV	TAPE	TAPE
TV	TV	3	3
TV	TV	4	4
TV	TV	5	5
TV	TV	6	6
TV	TV	AUX-HDD	AUX-HDD
TV	TV	7	7
TV	TV	8	8
TV	TV	9	9
TV	TV	0	0
TV	TV	GUIDE EPG	GUIDE EPG
TV	TV	NETFLIX	NETFLIX
TV	TV	APP	APP

