









 

 








 















































 



Original	Recharge
 Power	 Power
 EPG	 Guide / EPG / -/--
 TXT	 Text / Goto
 Input	 AV / Input / RDS
 Menu	 Menu / Home
 *1	 Picture / Format
 FPay	 Shift + Display / Media
 [+]	 Zoom / Size
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Multimedia	 Display / Media
 Netflix	 Shift + Red / Netflix /
 Internet	 Smart / List
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right

Original	Recharge
 OK	 OK
 Q.Menu	 D.Menu / Top
 Back	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Recharge	Original	Recharge
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	TV	 TV/Radio /		
	Recall	 Shift + Back / Return		
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		
	Rec	 Rec / Rec Mode		
	Lang	 Audio / Lang I/II		
	Subt.	 Subtitle / EQ		

