 
 

 
 





 
 

 









Original	Rechange
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 Standby	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /
 0	 0

Original	Rechange
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Vol+
 Variable Skip	 Vol-
 Guide	 Guide / EPG / -/--
 Top Menu	 D.Menu / Top
 Up	 Up
 Disc Menu	 Menu / Home
 Left	 Left
 Enter / OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 HDD	 Shift + 7
 DVD	 Shift + 2
 Time Slip	 TV/Radio /
 Dubbing	 Picture / Format
 Rec Mode	 Shift + Rec / Rec Mode
 Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ
 AD	 Sound / Title

Original	Recharge
 O)/Audio	 Audio / Lang I/II
 Sat Link	 Smart / List

