








 

































 




























Original		Rechange		Original		Rechange	
	Power		Power		Blue / C/S		Shift + Blue / Prime
	Timer		Sleep / Timer		Timer		Shift + Menu /
	Prog+		Shift + Up		Timer Clear		Shift + Exit / Cancel / Clear
	Day+		Shift + Right		Timer On/Off		Shift + Info / Angle
	Start+		Shift + Vol+		SP/LP		Smart / List
	Stop+		Shift + CH+ /		SV/V+		Display / Media
	Text Index		Text / Goto		Return		Back / Return
	Text Reveal		Subtitle / EQ		PAL / SEC		Picture / Format
	Text Size		Zoom / Size		INS / DUB		Sound / Title
	[Stop]		Shift + Stop /		Tip		Menu / Home
	Prog-		Shift + Down		Code		Exit / Cancel / Clear
	Day-		Shift + Left		Counter		I<< / Preset-
	Start-		Shift + Vol-		Reset		>>I / Preset+
	Stop-		Shift + CH- /		Audio		Audio / Lang I/II
	Red / VPS		Shift + Red / Netflix /		SAT		Shift + 0
	Green / ED/EW		Shift + Green / APP /		1		1
	Yellow		Shift + Yellow / YouTube / Repeat		2		2

 









	Original	Rechange		Original	Rechange
	3	3		Left / Vol-	Left
	4	4		Down / CH-	Down
	5	5		Down / CH-	CH- / Page-
	6	6		Rec	Rec / Rec Mode
	7	7		Stop	Stop / Hold
	8	8		Pause	Pause / Step / Freeze
	9	9		Play	Play / Slow
	VPT	Guide / EPG / -/-		Open / Close	Eject / Surround
	0	0		<<	<< / Tune-
	AV	AV / Input / RDS		>>	>> / Tune+
	i	Info / Angle		Index	Red / Netflix / Search
	Up / CH+	Up		Index Mark	Green / APP / Repeat
	Up / CH+	CH+ / Page+		Index Erase	Yellow / YouTube / Repeat
	Right / Vol+	Right		Traking	Blue / Prime Video / Random
	Right / Vol+	Vol+			
	OK	OK			
	Left / Vol-	Vol-			





Original	Rechange	Original	Rechange
	Power		Power
	Timer		Sleep / Timer
	Prog+		Shift + Up
	Day+		Shift + Right
	Start+		Shift + Vol+
	Stop+		Shift + CH+ /
	Text Index		Text / Goto
	Text Reveal		Subtitle / EQ
	Text Size		Zoom / Size
	[Stop]		Shift + Stop /
	Prog-		Shift + Down
	Day-		Shift + Left
	Start-		Shift + Vol-
	Stop-		Shift + CH- /
	Red / VPS		Shift + Red / Netflix /
	Green / ED/EW		Shift + Green / APP /
	Yellow		Shift + Yellow / YouTube / Repeat

Original	Rechange	Original	Rechange
	Blue / C/S		Shift + Blue / Prime
	Timer		Shift + Menu /
	Timer Clear		Shift + Exit / Cancel / Clear
	Timer On/Off		Shift + Info / Angle
	SP/LP		Smart / List
	SV/V+		Display / Media
	Back / Return		Back / Return
	PAL / SEC		Picture / Format
	INS / DUB		Sound / Title
	Tip		Menu / Home
	Code		Exit / Cancel / Clear
	Counter		I<< / Preset-
	Reset		>>I / Preset+
	Audio		Audio / Lang I/II
	SAT		Shift + 0
	1		1
	2		2





	Original	Rechange	Original	Rechange
	3	 3		Left / Vol-
	4	 4		Down / CH-
	5	 5		Down / CH-
	6	 6		Rec
	7	 7		Stop
	8	 8		Pause
	9	 9		Play
	VPT	 Guide / EPG / -/-		Open / Close
	0	 0		<< / Tune-
	AV	 AV / Input / RDS		>> / Tune+
	i	 Info / Angle		Index
	Up / CH+	 Up		Index Mark
	Up / CH+	 CH+ / Page+		Index Erase
	Right / Vol+	 Right		Tracking
	Right / Vol+	 Vol+		
	OK	 OK		
	Left / Vol-	 Left		



