 

 

 











 





Original	Rechange
 Power	 Power
 CD	 3
 Tuner	 6
 MD/CD-R	 5
 DVD	 2
 D-TV/CBL	 1
 VCR	 4
 AUX	 7
 V-AUX	 8
 6CH Input	 9
 Test	 TEXT Text / Goto
 Entrt / A/B/C/D/E	 SMART Smart / List
 Effect	 Exit / Cancel / Clear
 Preset -	 I<< / Preset-
 Preset +	 >>I / Preset+
 Volume +	 Vol+
 Mute	 Mute / Dimmer

Original	Rechange
 Sleep	 Sleep / Timer
 Volume -	 Vol-
 Disp	 Display / Media
 Up / PRG +	 Up
 Left	 Left
 Right	 Right
 Down / PRG -	 Down
 Time / Level	 << / Tune-
 Set Menu	 Menu / Home



