



Original	Recharge	Original	Recharge
	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	Drive Select		Picture / Format
	Input AV Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	Page/CH+		CH+ / Page+
	4		4
	5		5
	6		6
	Page/CH-		CH- / Page-
	7		7
	8		8
	9		9
	Last View		Fav / Marker / PC
	0		0
	Radio/Tv		TV/Radio /
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause/PAUSE LIVE		Pause / Step / Freeze
	Play		Play / Slow
	i/Status		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	Video Menu		D.Menu / Top
	Left		Left





Original	Recharge
	OK
	Up
	Right
	Menu / Home
	Shift + Setup / OPT / Tools
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode
	Shift + Rec / Rec Mode
	Text / Goto
	Subtitle / EQ
	Shift + TV/Radio / Program
	AV / Input / RDS

Original	Recharge
	Time Slip / Sleep / Timer
	Audio / Lang I/II
	Setup / OPT /
	Eject / Surround
	Manual Skip -10s / Smart / List
	Manual Skip +60s / Display / Media

