



| Original | | Recharge | | Original | | Recharge | |
|----------|--------------|----------|------------------------------|----------|--------|----------|-------------------------|
| | Power | | Power | | Up | | Up |
| | AV Set | | AV / Input / RDS | | Left | | Left |
| | Menu | | Menu / Home | | OK | | OK |
| | Mute | | Mute / Dimmer | | Right | | Right |
| | Red/Timer | | Red / Netflix / Search | | Back | | Back / Return |
| | Green/Sub | | Green / APP / Repeat | | Down | | Down |
| | Yellow/Audio | | Yellow / YouTube / Repeat | | Info | | Info / Angle |
| | Blue/TXT | | Blue / Prime Video / Random | | Vol+ | | Vol+ |
| | << | | << / Tune- | | Google | | Shift + Red / Netflix / |
| | Play | | Play / Slow | | P+ | | CH+ / Page+ |
| | Pause | | Pause / Step / Freeze | | Vol- | | Vol- |
| | >> | | >> / Tune+ | | DTV | | Fav / Marker / PC |
| | Stop | | Stop / Hold | | P- | | CH- / Page- |
| | YouTube | | Shift + Yellow / YouTube / | | 1 | | 1 |
| | prime video | | Shift + Blue / Prime | | 2 | | 2 |
| | Home | | Shift + Menu / | | 3 | | 3 |
| | APPS | | Shift + Green / APP / Repeat | | 4 | | 4 |





| Original | Recharge | Original | Recharge |
|----------|----------|------------------|--------------------|
| 5 | 5 | TAPE 5 | 5 |
| 6 | 6 | TUNER 6 | 6 |
| 7 | 7 | AUX - HDD 7 | 7 |
| 8 | 8 | USB 8 | 8 |
| 9 | 9 | BLUETOOTH 9 | 9 |
| EPG | EPG | GUIDE EPG | Guide / EPG / -/-- |
| 0 | 0 | HDMI - BAT 0 | 0 |
| TV/RADIO | Tv/Radio | PROGRAM TV/RADIO | TV/Radio / |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

