


















 
 
 






 












Original	Recharge
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 [<>]	 Picture / Format
 Search	 Shift + Green / APP / REPEAT
 *	 Menu / Home
 Tv Guide	 Guide / EPG / -/--
 List	 Shift + Smart / List
 Sources	 AV / Input / RDS
 Smart Tv	 Smart / List
 Home	 Shift + Menu / Home
 Tv/Exit	 Exit / Cancel / Clear
 Red	 Shift + Red / Netflix / Search

Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Info	 Info / Angle
 Options	 Setup / OPT / OPT-TOOLS
 Back	 Back / Return
 Multiview	 Display / Media
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Netflix	 Red / Netflix / Search
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+





Original		Recharge		Original	Recharge
	CH-		CH- / Page-		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Subtitle		Subtitle / EQ		
	Text		Text / Goto		

