







Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
Nicam	Shift + Audio / Lang I/II
4	4
5	5
6	6
Recall/Goto	Back / Return
Recall/Goto	Shift + Text /
7	7
8	8
9	9
0	0
TV Menu	Menu / Home
Up	Up

Original	Rechange
Source	AV / Input / RDS
Left	Left
Enter	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Display	Display / Media
Vol+	Vol+
Sound	Sound / Title
CH+	CH+ / Page+
Vol-	Vol-
Pic	Picture / Format
CH-	CH- / Page-
Sleep	Sleep / Timer
Aspect	Shift + Picture / Format
DVD/DVB Setup	Setup / OPT /
DVD Source	Shift + AV / Input / RDS





Original	Recharge
 Fav	 Fav / Marker / PC
 Text	 Text / Goto
 Info	 Info / Angle
 EPG	 Guide / EPG / -/--
 Return / Index	 Shift + Back / Return
 Title / Size	 Shift + Sound / Title
 Title / Size	 Zoom / Size
 Angle / Hold	 Shift + Stop /
 PBC / Subcode	 TV/Radio /
 Repeat / Reveal	 Shift + Green / APP /
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 Open/Close	 Eject / Surround
 Red / <<	 << / Tune-
 Red / <<<	 Red / Netflix / Search
 Green / >>>	 >> / Tune+
 Green / >>>	 Green / APP / Repeat

Original	Recharge
 Yellow / I<<<	 I<<< / Preset-
 Yellow / I<<<	 Yellow / YouTube / Repeat
 Blue / >>>I	 >>>I / Preset+
 Blue / >>>I	 Blue / Prime Video / Random
 DVD Menu	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 DVD Display	 Shift + Display / Media
 Rec	 Rec / Rec Mode
 Rec List	 Smart / List
 PVR Info	 Shift + Info / Angle
 PIP	 Shift + Smart / List

