




 


























 











Original	Recharge	Original	Recharge
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Menu audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Disp	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Reveal	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Info	 Info / Angle	6	 6
Menu Left	 Left	7	 7
OK Enter	 OK	8	 8



Original	Recharge
9	 9
Guide -/-- 1.	 Guide / EPG / -/--
0/10	 0
2.Fav P/C 2.	 Fav / Marker / PC
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random

Original	Recharge

