







































 

















 





 
 




Original	Recharge	Original	Recharge
	Power		Power
	Input		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Back / Return
	Hold		Stop / Hold
	I-II		Audio / Lang I/II
	[-o-] Active Control		Smart / List
	[<>]		D.Menu / Top











 







Original	Recharge	Original	Recharge
	Power		Power
	Source		AV / Input / RDS
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Back / Return
	I-II		Audio / Lang I/II
	[<>]		Picture / Format





Original	Recharge
 Power	 Power
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3

Original	Recharge
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0









 

 











Original	Recharge
Power	Power
Power AMP	+ Shift + Power
Source	AV / Input / RDS
>>	>> / Tune+
>> AMP	>>I / Preset+
Red	Red / Netflix / Search
Rec	Rec / Rec Mode
<< AMP	I<< / Preset-
Green	Green / APP / Repeat
<<	<< / Tune-
Yellow	Yellow / YouTube / Repeat
Stop	Stop / Hold
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause AMP	Pause / Step / Freeze
[=] AMP	Text / Goto
Up AMP	+ Shift + Up

Original	Recharge
Up	Up
Left	Left
Left AMP	+ Shift + Left
OK	OK
OK AMP	+ Shift + OK
Right	Right
Right AMP	+ Shift + Right
Down	Down
Down AMP	+ Shift + Down
Menu	Menu / Home
Menu AMP	D.Menu / Top
Vol+ AMP	+ Shift + Smart / List
Vol+	Vol+
P+	CH+ / Page+
P+ AMP	+ Shift + CH+ /
Vol-	Vol-
Mute AMP	+ Shift + Mute / Dimmer





Original	Recharge
	Mute / Dimmer
	Shift + CH PAGE / CH- /
	CH- / Page-
	Shift + TV 1 / 1
	1
	Shift + DVD 2 / 2
	2
	Shift + CD- STB 3 / 3
	3
	Shift + VIDEO 4 / 4
	4
	Shift + TAPE 5 / 5
	5
	Shift + TUNER 6 / 6
	6
	Shift + AUX - HDD 7 / 7
	7

Original	Recharge
	Shift + USB 8 / 8
	8
	Shift + BLUETOOTH 9 / 9
	9
	Info / Angle
	Shift + HDMI - BAT 0 / 0
	0
	Fav / Marker / PC
	Shift + HOLD / Stop /
	Audio / Lang I/II
	Picture / Format
	Smart / List
	Display / Media

