





















 



 







 













 
 


 



Original	Rechange
 Power	 Power
 TV/Video	 AV / Input / RDS
 PC	 Fav / Marker / PC
 Display	 Display / Media
 Still	 Pause / Step / Freeze
 P.STD	 Picture / Format
 S.STD	 Sound / Title
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Up / P+	 CH+ / Page+
 Up / P+	 Up
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Menu / Index	 OK
 Menu / Index	 Menu / Home
 Down / P-	 Down
 Down / P-	 CH- / Page-

Original	Rechange
 Mute	 Mute / Dimmer
 exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Pre-CH	 Back / Return
 TTX/Mix	 Text / Goto
 Auto	 Setup / OPT /
 Sleep / Hold	 Sleep / Timer





Original	Recharge
 Sleep / Hold	 Stop / Hold
 Dual I/II	 Audio / Lang I/II
 List / FLOF	 Smart / List
 Cancel	 Shift + Exit / Cancel / Clear
 P.Size	 Zoom / Size
 Size	 Shift + Zoom /
 Subpage	 Subtitle / EQ
 PIP On	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / PIP Size	 Yellow / YouTube / Repeat
 Blue / PIP Locate	 Blue / Prime Video / Random

Original	Recharge

