 

 



 



 




 

 



 



 



 



 


 
 


 
 


 


 
 

 















 


 
 

 
 
 

 









Original	Rechange	Original	Rechange
 Power	 Power	 10+	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 Zoom	 Text / Goto
 EQ	 Subtitle / EQ	 TV-Mode	 TV/Radio /
 1	 1	 I<<	 << / Tune-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Stop	 Stop / Hold
 OSD	 Display / Media	 Play	 Play / Slow
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 <<	 >> / Tune+
 6	 6	 >>	 I<< / Preset-
 L/R	 Red / Netflix / Search	 USB/Card	 Shift + 8
 7	 7	 Up	 Up
 8	 8	 Menu	 Menu / Home
 9	 9	 Left	 Left
 P/N	 Picture / Format	 Enter	 OK
 Repeat	 Green / APP / Repeat	 Right	 Right
 0/10	 0	 Return	 Back / Return





Original	Rechange
 Down	 Down
 Setup	 Setup / OPT /
 Reset	 Exit / Cancel / Clear
 Treb+	 Shift + Up
 Sub+	 CH+ / Page+
 Vol+	 Vol+
 Input	 AV / Input / RDS
 Treb-	 Shift + Down
 Sub-	 CH- / Page-
 Vol-	 Vol-

Original	Rechange

