







 







 





 






 








Original	Recharge
 Power	 Power
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 CH.List	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Recharge
 Blue	 Blue / Prime Video / Random
 [=]	 D.Menu / Top
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Menu / Home
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-





Original

Rechange

TEXT	Text	GOTO TEXT	Text / Goto
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
INFO	Info	ANGLE INFO	Info / Angle
FREE	Free	PC FAV MARKER	Fav / Marker / PC
SPORTS	Sports	OPT-TOOLS SETUP	Setup / OPT /
deezer	deezer	PROGRAM TV/RADIO	TV/Radio /
NETFLIX	Netflix	SHIFT + NETFLIX	Shift + Red / Netflix /
prime video	prime video	SHIFT + Prime Video	Shift + Blue / Prime
YouTube	You Tube	SHIFT + YouTube	Shift + Yellow / YouTube /
Rakuten TV	Rakuten Tv	SHIFT + APP	Shift + Green / APP /
7	7/ Seven	MEDIA DISPLAY	Display / Media
CHILI	Chili	FORMAT PICTURE	Picture / Format

Original

Rechange

