


 








 



 























Original	Recharge
Theatre	 Fav / Marker / PC
One-Touch Play	 +  Shift + Play /
Power	 Power
Sleep	 Sleep / Timer
Night	 Text / Goto
Dynamic Bass	 Eject / Surround
TV	 +  Shift + 1
TV	 TV/Radio /
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9

Original	Recharge
Clear	 Exit / Cancel / Clear
0	 0
Time	 +  Shift + Sleep / Timer
Audio	 Audio / Lang I/II
Subtitles / D.Tuning	 Subtitle / EQ
Angle	 +  Shift + Info / Angle
System Menu	 +  Shift + Menu /
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Top Menu	 D.Menu / Top
Display	 Display / Media
Pop Up / Menu	 Menu / Home
Up	 Up
Left	 Left
Enter	 OK






























































 








Original	Recharge	Original	Recharge
Right		Right	
Return		Back / Return	
Down		Down	
Options		Setup / OPT /	
Home		Smart / List	
Function		AV / Input / RDS	
Sound Mode		Sound / Title	
I<< / Preset-		I<< / Preset-	
<- Replay		CH- / Page-	
-> Advance		CH+ / Page+	
>>I / Preset+		>>I / Preset+	
<< / Tuning-		<< / Tune-	
Play		Play / Slow	
>> / Tuning+		>> / Tune+	
Scene Search	 + 	Shift + Red / Netflix /	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	





Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Setup / OPT /
 1	 1	 Muting	 Mute / Dimmer
 2	 2	 Volume+	 Vol+
 3	 3	 Prog+	 CH+ / Page+
 4	 4	 Source	 AV / Input / RDS
 5	 5	 Volume-	 Vol-
 6	 6	 Prog-	 CH- / Page-
 7	 7	 [i+]	 Info / Angle
 8	 8		
 9	 9		
 Text	 Text / Goto		
 0	 0		
 -/--	 Shift + Guide / EPG / -/--		
 Digital	 Smart / List		
 Analog	 Display / Media		
 Guide	 Guide / EPG / -/--		
 Home / Menu	 Menu / Home		

Original	Rechange	Original	Rechange
 Power	 Power	 TV	 DVD
 1	 1	 SAT	 AUX
 2	 2	 SLOW	 STEP-FREEZE
 3	 3	 HOLD	 REC MODE
 4	 4	 TUNE-	 TUNE+
 5	 5	 PRESET-	 PRESET+
 6	 6	 TITLE	 LANG
 7	 7	 EQ	 SURROUND
 8	 8	 SOUND	 AUDIO
 9	 9	 SUBTITLE	 PROGRAM
 Text	 Text / Goto	 PICTURE	 ZOOM
 0	 0	 SLEEP	 TV RADIO
 -/--	 Shift + Guide / EPG / -/--	 TOP MENU	 OPT-TOOLS
 Digital	 Smart / List	 D.MENU	 SETUP
 Analog	 Display / Media	 GOTO	 TEXT
 Guide	 Guide / EPG / -/--	 HOME	 ANGLE
 Home / Menu	 Menu / Home	 RETURN	 INFO

