



Original		Rechange	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	I<</Tuning-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/Tuning+		>>I / Preset+
	Repeat/FM Mode/Skip/Search		Green / APP / Repeat
	Stop		Stop / Hold
	Memory		OK

Original		Rechange	
	Preset		AV / Input / RDS
	Vol+		Vol+
	Band		D.Menu / Top
	Vol-		Vol-

