



Original	Recharge
Standby/On	Power
Open/Close	Eject / Surround
Display	Display / Media
Up	Up
DVD Menu	D.Menu / Top
Left	Left
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Pause/Step	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
<<	<< / Tune-
Play	Play / Slow

Original	Recharge
>>	>> / Tune+
1	1
2	2
3	3
Program	TV/Radio /
4	4
5	5
6	6
Clear	Exit / Cancel / Clear
7	7
8	8
9	9
0	0
O)))/Audio	Audio / Lang I/II
[...]/Subtitle	Subtitle / EQ
Camera/Angle	Info / Angle
Zoom	Zoom / Size



