


 




Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 TV / Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 HD / SD	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Back	 Back / Return
 0	 0

Original	Rechange
 AV	 AV / Input / RDS
 Vol+	 Vol+
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Up	 Up
 CH-	 CH- / Page-
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Home	 D.Menu / Top
 EPG	 Guide / EPG / -/-
 List	 Smart / List
 Fav	 Fav / Marker / PC
 Dual Screen	 Setup / OPT /





Original		Recharge		Original	Recharge
	i		Info / Angle		
	Red / Stop		Red / Netflix / Search		
	Red / Stop		Stop / Hold		
	Green /		Green / APP / Repeat		
	Green /		Pause / Step / Freeze		
	Green /		Play / Slow		
	Yellow / <<<		<<< / Tune-		
	Yellow / <<<		Yellow / YouTube / Repeat		
	Blue / >>>		>>> / Tune+		
	Blue / >>>		Blue / Prime Video / Random		
	APP		Shift + Green / APP /		
	Format		Picture / Format		
	Timer		Sleep / Timer		
	Audio ?		Audio / Lang I/II		

