



Original		Rechange		Original		Rechange	
	Power		Power		Input		AV / Input / RDS
	Mute		Mute / Dimmer		LCD Menu		Menu / Home
	Play		Play / Slow		Up		Up
	Pause		Pause / Step / Freeze		Index		Info / Angle
	Stop		Stop / Hold		Left		Left
	<<		<< / Tune-		Enter		OK
	>>		>> / Tune+		Right		Right
	I<<		I<< / Preset-		Down		Down
	>>I		>>I / Preset+		Recall		Back / Return
	S.Mode		Sound / Title		Vol+		Vol+
	Audio/Reveal		Audio / Lang I/II		DVD Setup		Smart / List
	Zoom/Subpage		Subtitle / EQ		CH+		CH+ / Page+
	P.Mode		Picture / Format		Vol-		Vol-
	Size		Zoom / Size		Display		Display / Media
	Sleep		Sleep / Timer		CH-		CH- / Page-
	D.Menu		D.Menu / Top		1		1
	Text		Text / Goto		2		2





Original	Recharge	Original	Recharge
3	3	Aspect	Shift + Picture / Format
4	4	D.Subt.	Shift + Zoom /
5	5	Goto	Shift + Text /
6	6	Angle	Shift + Info / Angle
7	7	Slow/PgUp	Shift + CH+ /
8	8	D.Disp	Shift + Display / Media
9	9	Step/PgDn	Shift + CH- /
-/--	Guide / EPG / -/--		
0	0		
Auto	Fav / Marker / PC		
Red/Program	Red / Netflix / Search		
Green/Intro	Green / APP / Repeat		
Yellow/Repeat	Yellow / YouTube / Repeat		
Blue/A-B	Blue / Prime Video / Random		
Hold	Shift + Stop /		
Title	Shift + Sound / Title		
Nicam	Shift + Audio / Lang I/II		

Original	Recharge
Aspect	Shift + Picture / Format
D.Subt.	Shift + Zoom /
Goto	Shift + Text /
Angle	Shift + Info / Angle
Slow/PgUp	Shift + CH+ /
D.Disp	Shift + Display / Media
Step/PgDn	Shift + CH- /

