



Original		Rechange		Original		Rechange	
	Power		Power		6/↑		6
	Mode		D.Menu / Top		7/*		7
	Mute		Mute / Dimmer		8/0		8
	Band		TV/Radio /		9/#		9
	Vol+		Vol+				
	APS		Text / Goto				
	I<<		I<< / Preset-				
	Sel		OK				
	>>I		>>I / Preset+				
	CLK		Sleep / Timer				
	Vol-		Vol-				
	ST		Sound / Title				
	1/PAU		1				
	2/INT		2				
	3/RPT		3				
	4/RDM		4				
	5/↓		5				

