 

 

 

 

 







 















 





Original	Recharge
 Power	 Power
 TV / DTV	 TV/Radio /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 Fav	 Fav / Marker / PC
 Picture	 Picture / Format

Original	Recharge
 Sound	 Sound / Title
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 I/II	 Audio / Lang I/II
 Still	 Pause / Step / Freeze
 Zoom	 Zoom / Size
 Exit	 Exit / Cancel / Clear





Original	Recharge
Radio / Browse	Display / Media
T.Shift / Rotate	Setup / OPT /
Lang / Page Up	Shift + CH+ /
Lang / Page Up	Shift + Audio / Lang I/II
Subtitle / Page Down	Shift + CH- /
Subtitle / Page Down	Subtitle / EQ
DMP.	Smart / List
PVR	D.Menu / Top
Play / Pause	Play / Slow
Stop	Stop / Hold
Red / <<	<< / Tune-
Red / <<	Red / Netflix / Search
Green / >>	>> / Tune+
Green / >>	Green / APP / Repeat
Yellow / I<<	I<< / Preset-
Yellow / I<<	Yellow / YouTube / Repeat
Blue / >>I	Blue / Prime Video / Random

Original	Recharge
Blue / >>I	>>I / Preset+
Text	Text / Goto
Size	Shift + Zoom /
Reveal	Eject / Surround
Cancel	Shift + Exit / Cancel / Clear
Hold / Sleep	Shift + Stop /
Hold / Sleep	Sleep / Timer
Index	Shift + Info / Angle
Sub. Code	Shift + Subtitle / EQ
Mix	Shift + Text /

