



| Original | Recharge |
|---|---|
|  Power |  Power |
|  Eject |  Eject / Surround |
|  i |  Info / Angle |
|  Clear |  Exit / Cancel / Clear |
|  LP |  Menu / Home |
|  Rec / ITR |  Rec / Rec Mode |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  P/Still |  Pause / Step / Freeze |
|  Rew |  << / Tune- |
|  Play |  Play / Slow |
|  FF |  >> / Tune+ |
|  Stop |  Stop / Hold |
|  1 |  1 |

| Original | Recharge |
|--|--|
|  2 |  2 |
|  3 |  3 |
|  CM Skip |  Display / Media |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  TV / VCR |  Smart / List |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  ez Power Off |  Mute / Dimmer |
|  AV |  AV / Input / RDS |
|  ez Repeat |  Green / APP / Repeat |
|  C. Lock |  D.Menu / Top |

