



 



 





Original		Rechange		Original		Rechange	
	Timer		D.Menu / Top		LW		CH- / Page-
	Timer	+	Shift + Sleep / Timer		9		9
	Set		Menu / Home		10		Guide / EPG / -/--
	Standby / Delete	+	Shift + Power		11		0
	Standby / Delete		Exit / Cancel / Clear		12		Fav / Marker / PC
	Sleep		Sleep / Timer		FM Mode		Red / Netflix / Search
	Power		Power		Direct		Green / APP / Repeat
	FM		Smart / List		Function		Yellow / YouTube / Repeat
	1		1		CD I<<<		I<<< / Preset-
	2		2		CD >>I		>>I / Preset+
	3		3		CD Stop		Stop / Hold
	4		4		CD Pause		Pause / Step / Freeze
	MW		CH+ / Page+		CD Play		Play / Slow
	5		5		DECK <<<		Down
	6		6		DECK Rev. Play		Left
	7		7		DECK Play		Right
	8		8		DECK >>>		Up





Original	Recharge
 DECK Stop	 OK
 PHONO Start / Cut	 Display / Media
 DECK Rec	 Info / Angle
 DECK Pause	 Back / Return
 DECK 1/2	 AV / Input / RDS
 Surround	 Eject / Surround
 BBE	 Sound / Title
 Muting	 Mute / Dimmer
 Volume-	 Vol-
 Volume+	 Vol+

Original	Recharge





Original	Rechange
Timer	D.Menu / Top
Timer	+ Shift + Sleep / Timer
Set	Menu / Home
Standby / Delete	Exit / Cancel / Clear
Standby / Delete	+ Shift + Power
Sleep	Sleep / Timer
Power	Power
FM	Smart / List
CD 1	1
CD 2	2
CD 3	3
CD 4	4
MW	CH+ / Page+
CD 5	5
CD 6	6
CD 7	7
CD 8	8

Original	Rechange
LW	CH- / Page-
CD 9	9
CD 0	0
CD +10	Guide / EPG / -/--
CD Program	TV/Radio /
FM Mode	Red / Netflix / Search
Direct	Green / APP / Repeat
Function	Yellow / YouTube / Repeat
CD I<<	I<< / Preset-
CD >>I	>>I / Preset+
CD Stop	Stop / Hold
CD Pause	Pause / Step / Freeze
CD Play	Play / Slow
DECK <<	Down
DECK Rev. Play	Left
DECK Play	Right
DECK >>	Up





Original	Recharge
DECK Stop	OK
PHONO Start / Cut	Display / Media
DECK Rec	Info / Angle
DECK Pause	Back / Return
DECK 1/2	AV / Input / RDS
Surround	Eject / Surround
BBE	Sound / Title
Muting	Mute / Dimmer
Volume-	Vol-
Volume+	Vol+

Original	Recharge





Original		Rechange		Original		Rechange	
	Timer		D.Menu / Top		LW		CH- / Page-
	Timer	+	Shift + Sleep / Timer		GEQ Down		Down
	Set		Menu / Home		GEQ Up		Up
	Standby / Delete		Exit / Cancel / Clear		GEQ Off/On		OK
	Standby / Delete	+	Shift + Power		GEQ PRGM		AV / Input / RDS
	Sleep		Sleep / Timer		FM Mode		Red / Netflix / Search
	Power		Power		Direct		Green / APP / Repeat
	FM		Smart / List		Function		Yellow / YouTube / Repeat
	GEQ 40Hz		1		CD I<<<		I<<< / Preset-
	GEQ 125Hz		2		CD >>I		>>I / Preset+
	GEQ 330Hz		3		CD Stop		Stop / Hold
	GEQ 1KHz		4		CD Pause		Pause / Step / Freeze
	MW		CH+ / Page+		CD Play		Play / Slow
	GEQ 2.5KHz		5		PHONO Start / Cut		Display / Media
	GEQ 6.3KHz		6		Surround		Eject / Surround
	GEQ15KHz		7		BBE		Sound / Title
	GEQ		TV/Radio /		Muting		Mute / Dimmer



PRGM/Manual Program



	Original	Recharge	Original	Recharge
VOLUME-	Volume-	VOL -		
VOLUME+	Volume+	VOL +		

