























 





 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play/Pause CD	 Play / Slow
 <> Tape	 Pause / Step / Freeze
 Stop/Auto/Mono	 Stop / Hold
 Tape Rec	 Rec / Rec Mode
 << Tuning	 << / Tune-
 Tuning >>	 >> / Tune+
 I<< P.Call	 I<< / Preset-
 P.Call >>I	 >>I / Preset+
 Sound	 Sound / Title
 Tape EQ.	 Subtitle / EQ
 Tone	 Picture / Format
 Tape O.T.E.	 Zoom / Size
 Sleep	 Sleep / Timer
 Tuner/Band	 TV/Radio /
 PGM	 Setup / OPT /

Original	Rechange
 PTY/Time Display	 Text / Goto
 Set	 Menu / Home
 Enter	 OK
 Clear	 Exit / Cancel / Clear
 Volume+	 Vol+
 Volume-	 Vol-
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/-



