


 


















 






 

 
 

 

 



 





	Original	Rechange	Original	Rechange
	 Plus One	 Smart / List	 Search	 Red / Netflix / Search
	 Sleep	 Sleep / Timer	 Up	 Up
	 Power	 Power	 Vol+	 Vol+
	 Function	 Menu / Home	 Left	 Left
	 Pause	 Pause / Step / Freeze	 Enter	 OK
	 Stop	 Stop / Hold	 Right	 Right
	 Tuner/Band	 6	 Down	 Down
	 I<</Tune-	 I<< / Preset-	 Vol-	 Vol-
	 >>I/Tune+	 >>I / Preset+		
	 Tape A	 4		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Tape B	 5		
	 Hi-Light	 Setup / OPT /		
	 GEQ File	 Subtitle / EQ		
	 Play CD	 Play / Slow		
	 Loop	 Display / Media		

