







 











 















 



 



 



 

 

 







 











Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Freeze		Pause / Step / Freeze		9		9
	Subtitle		Subtitle / EQ		Jump		Back / Return
	Guide		Guide / EPG / -/--		0		0
	Fav.CH		Fav / Marker / PC		Ent		Display / Media
	I-II		Audio / Lang I/II		Vol+		Vol+
	Text / Mix		Text / Goto		Info		Info / Angle
	Mute		Mute / Dimmer		CH+		CH+ / Page+
	Sleep		Sleep / Timer		Vol-		Vol-
	P.Size		Setup / OPT /		Input		AV / Input / RDS
	1		1		CH-		CH- / Page-
	2		2		Exit		Exit / Cancel / Clear
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right



