



 


 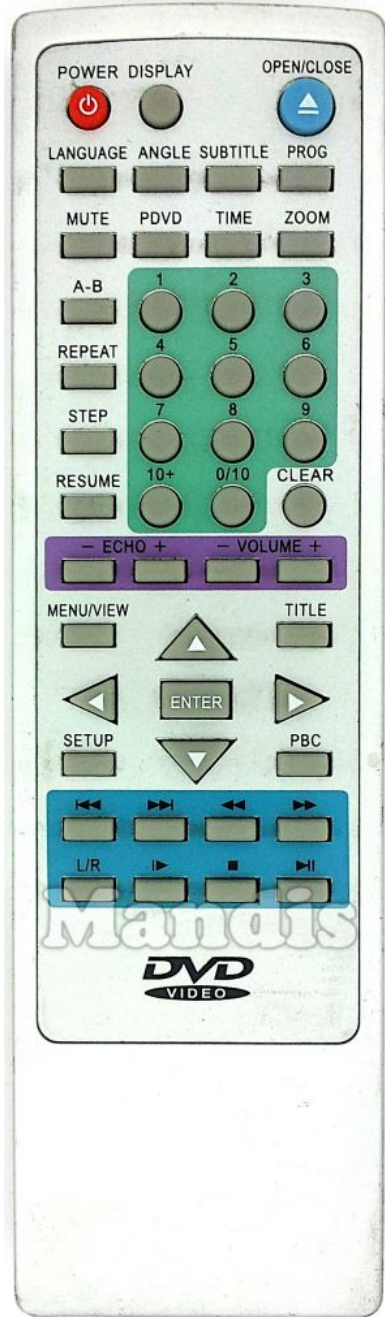














Original	Rechange
Power	Power
Display	Display / Media
Open/Close	Eject / Surround
Language	Audio / Lang I/II
Angle	Info / Angle
Subtitle	Subtitle / EQ
Prog	TV/Radio /
Mute	Mute / Dimmer
PDVD	AV / Input / RDS
Time	Sleep / Timer
Zoom	Zoom / Size
A-B	Yellow / YouTube / Repeat
1	1
2	2
3	3
Repeat	Green / APP / Repeat
4	4

Original	Rechange
5	5
6	6
Step	Shift + Pause / Step /
7	7
8	8
9	9
Resume	Smart / List
10+	Guide / EPG / -/-
0/10	0
Clear	Exit / Cancel / Clear
Echo-	CH- / Page-
Echo+	CH+ / Page+
Volume-	Vol-
Volume+	Vol+
Menu/View	Menu / Home
Up	Up
Title	Sound / Title





	Original	Recharge	Original	Recharge
	Left			
	Enter			
	Right			
	Setup			
	Down			
	PBC			
	I<<			
	>>I			
	<<			
	>>			
	L/R			
	I>			
	Stop			
	Play/Pause	