



Original	Rechange
Tv/AV	AV / Input / RDS
Power	Power
Multimedia	Display / Media
PIP	Zoom / Size
Zoom-	Shift + CH- /
Zoom+	Shift + CH+ /
Mute	Mute / Dimmer
Text/*	Text / Goto
Sleep	Sleep / Timer
List	Smart / List
I/II	Audio / Lang I/II
Menu	Menu / Home
ARC	D.Menu / Top
Exit	Exit / Cancel / Clear
Left	Left
Up	Up
Right	Right







Original	Rechange
OK	OK
Down	Down
Red/PIP PR-	Red / Netflix / Search
Green/PIP PR+	Green / APP / Repeat
Yellow/Swap	Yellow / YouTube / Repeat
Blue/PIP Input	Blue / Prime Video / Random
Vol+	Vol+
PR+	CH+ / Page+
Vol-	Vol-
SSM	Shift + Smart / List
PSM	Shift + Display / Media
PR-	CH- / Page-
1	1
2	2
3	3
4	4
5	5







Original	Rechange
 Power	 Power
 Menu	 Menu / Home
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+





 

 







 

 

 

 

 







 



 



Original	Rechange
Power STB	Power
Mute STB	Mute / Dimmer
Tv/AV STB	AV / Input / RDS
Menu STB	Menu / Home
Up STB	Up
Left STB	Left
OK STB	OK
Right STB	Right
Down STB	Down
Vol+ STB	Vol+
PR+ STB	CH+ / Page+
Vol- STB	Vol-
PR- STB	CH- / Page-
1 STB	1
2 STB	2
3 STB	3
4 STB	4

Original	Rechange
5 STB	5
6 STB	6
7 STB	7
8 STB	8
9 STB	9
0 STB	0
Power Cable	Shift + Power
Mute Cable	Shift + Mute / Dimmer
Menu Cable	Shift + Menu /
Up Cable	Shift + Up
OK Cable	Shift + OK
Down Cable	Shift + Down
Vol+ Cable	Shift + Vol+
PR+ Cable	Shift + CH+ /
Vol- Cable	Shift + Vol-
PR- Cable	Shift + CH- /
1 Cable	Shift + 1







Original	Rechange
 Power VCR	 Power
 Tv/AV VCR	 AV / Input / RDS
 PR+ VCR	 CH+ / Page+
 PR- VCR	 CH- / Page-
 1 VCR	 1
 2 VCR	 2
 3 VCR	 3
 4 VCR	 4
 5 VCR	 5
 6 VCR	 6
 7 VCR	 7
 8 VCR	 8
 9 VCR	 9
 0 VCR	 0
 Play VCR	 Play / Slow
 Pause VCR	 Pause / Step / Freeze
 Stop VCR	 Stop / Hold

Original	Rechange
 Rec VCR	 Rec / Rec Mode
 << VCR	 << / Tune-
 >>	 >> / Tune+
 Power Audio	 Shift + Power
 Vol+ Audio	 Vol+
 Vol- Audio	 Vol-
 Mute Audio	 Mute / Dimmer

