



Original	Rechange
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 AUX2	 Shift + 7
 Game	 Shift + Guide / EPG / -/-
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Heos	 Shift + Fav / Marker / PC
 Internet Radio	 Smart / List
 CH/Page+	 CH+ / Page+

Original	Rechange
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Eco	 D.Menu / Top
 Volume-	 Vol-
 Info	 Info / Angle
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Home	 Menu / Home
 Stop	 Stop / Hold





Original	Rechange
Pause	Pause / Step / Freeze
Play	Play / Slow
I<</Tune-	I<< / Preset-
>>I/Tune+	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Smart Select 1	Sound / Title
Smart Select 2	Audio / Lang I/II
Smart Select 3	Subtitle / EQ
Smart Select 4	Eject / Surround
Green/Movie	Green / APP / Repeat
Red/Music	Red / Netflix / Search
Blue/Game	Blue / Prime Video / Random
Yellow/Pure	Yellow / YouTube / Repeat
1	1
2	2
3	3

Original	Rechange
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Enter	Fav / Marker / PC





Original	Rechange
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Guide / EPG / -/-
 AUX2	 Shift + 7
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + Fav / Marker / PC
 Internet Radio	 Smart / List
 CH/Page+	 CH + / Page+

Original	Rechange
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+

















 







 

 











Original	Rechange
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 Tv Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 5
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Guide / EPG / -/-
 AUX2	 Shift + 7
 Phono	 Guide / EPG / -/-
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + Fav / Marker / PC
 CH/Page+	 Smart / List
 CH/Page+	 CH + / Page+

Original	Rechange
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-





Original		Rechange		Original	Rechange
	>>		>> / Tune+		
	Smart Select 1		Sound / Title		
	Smart Select 2		Audio / Lang I/II		
	Smart Select 3		Subtitle / EQ		
	Smart Select 4		Eject / Surround		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Enter		OK		
	Enter		Fav / Marker / PC		

