



Original		Rechange		Original		Rechange	
	Power		Power		V-		Vol-
	Input		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		[G]		Guide / EPG / -/-
	3		3		i		Info / Angle
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	Lang		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix /
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube /
	V+		Vol+		prime video		Shift + Blue / Prime
	Mute		Mute / Dimmer		Rakuten Tv		TV/Radio /
	P+		CH+ / Page+		twitch		Shift + Green / APP / Repeat





Original		Recharge		Original		Recharge	
	*1	 <small>OPT-TOOLS</small>	Setup / OPT /				
	Red	 <small>NETFLIX SEARCH</small>	Red / Netflix / Search				
	Green	 <small>APP REPEAT</small>	Green / APP / Repeat				
	Yellow	 <small>YouTube REPEAT A-B</small>	Yellow / YouTube / Repeat				
	Blue	 <small>Prime Video RANDOM</small>	Blue / Prime Video / Random				
	<<	 <small>TUNE-</small>	<< / Tune-				
	Pause	 <small>STEP-FREEZE</small>	Pause / Step / Freeze				
	>>	 <small>TUNE+</small>	>> / Tune+				
	Rec	 <small>REC MODE</small>	Rec / Rec Mode				
	Play	 <small>SLOW</small>	Play / Slow				
	Stop	 <small>HOLD</small>	Stop / Hold				

