



Original	Recharge
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
CH+ Tv	Shift + CH+ /
Select Drive	Smart / List
AV Tv	Shift + AV / Input / RDS
Vol- Tv	Vol-
CH- Tv	Shift + CH- /
1	1
2	2
3	3
CH/Page Up	CH+ / Page+
4	4
5	5
6	6
CH/Page Down	CH- / Page-
7	7

Original	Recharge
8	8
9	9
ShowView	Picture / Format
Delete/*	Zoom / Size
0	0
Input Select	AV / Input / RDS
Prog/Check	TV/Radio /
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow/Search	<< / Tune-
Slow/Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play/x1.3	Play / Slow
i/Status	Info / Angle
Guide	Guide / EPG / -/-
Exit	Exit / Cancel / Clear





Original	Recharge
Direct Navigator	D.Menu / Top
Left/<II	Left
Up	Up
OK	OK
Right/ II>	Right
Function Menu	Menu / Home
Option	Setup / OPT /
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow/Create Chapter	Yellow / YouTube / Repeat
Blue/Manual Skip	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
EXT Link	Eject / Surround
Direct Tv Rec	Text / Goto

Original	Recharge
Audio	Audio / Lang I/II
STTL	Subtitle / EQ
Display	Display / Media
Time Slip	Sleep / Timer

